IMPORTANT: Pack carefully in original package if possible. We are not responsible for damage incurred in returning items for repair, A letter stating your exact street addres,daytime phone number,and the problem you are experiencing should be included. You must also enclose a copy of the original receipt a sproof of date of purchase

www.pyleaudio.com

User's Manual

PHIT84BK

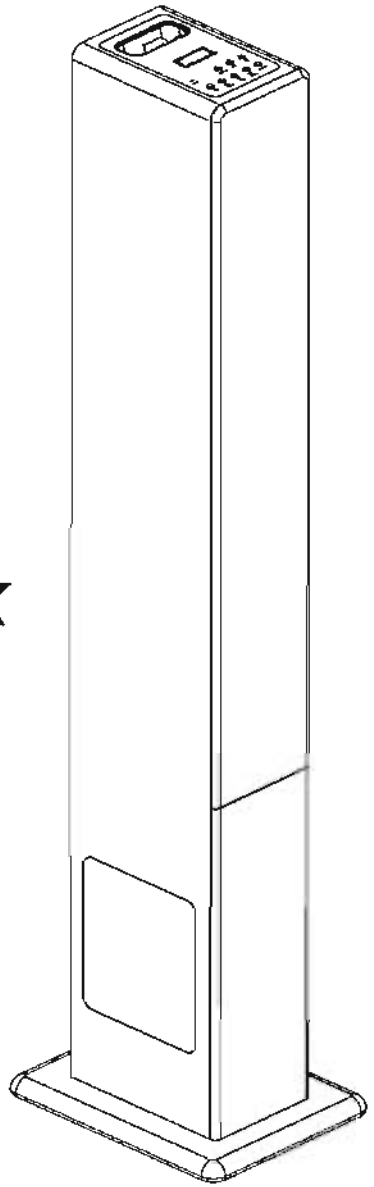

iPod/iPhone 2.1 Tower Docking Speaker System with FM Radio

iPhone Docking System

www.pyleaudio.com

IMPORTANT SAFETY INSTRUCTIONS

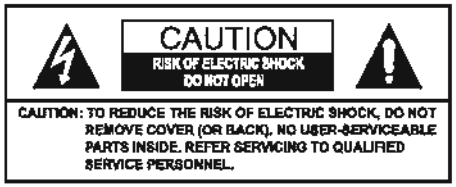
CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

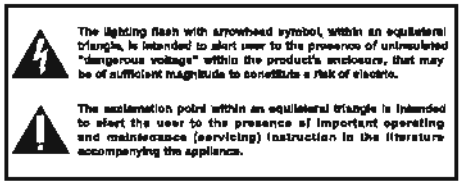
The lighting flash with arrowhead symbol, within an equilateral triangle, is intended to alert user to the presence of uninsulated "dangerous voltage" within the product's enclosure, that may be of sufficient magnitude to constitute a risk of electric.
The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instruction in the literature accompanying the appliance.

WARNING

USE UNDER SUPERVISION OF AN ADULT DUE TO LONG CORD

This unit has a long AC cord or other long cord that can easily be tripped on or pulled on, causing injury, Please make sure it is arranged so it will not drape over a tabletop,etc. Where it can be pulled on by children or tripped over accidentally.

FCC NOTICE:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide residential protection against harmful interference in a residential installation. This equipment generates,uses and can radiate radio frequency energy and,if not installed and used in accordance with the instructions,may cause harmful interference to radio communications.
However,there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmfull interference to radio or television reception. which can be determined by turning the equipment off and on,the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC NOTICE:
To assure continued compliance, follow the attached installation instructions and use only shielded cables when connecting to other devices. Modifications not authorized by the manufacturer may void user's authority to operate this device.

Before using the unit, be sure to read all operating instructions carefully. Please note that these are general precautions and may not pertain to your unit. For example, this unit may not have the capability to be connected to an outdoor antenna.

1. **Read these instructions**
   All the safety and operating instructions should be read before the product is operated.
2. **Keep these instructions**
   The safety and operating instructions should be retained for future reference.
3. **Head all warning**
   All warnings on the product and in the operating instructions should be adhered to.
4. **Follow all instructions**
   All operating and use instructions should be followed.
5. **Do not use this apparatus near water**
   Do not use the product near water and moisture, for example: near a bathtub, washbowl, kitchen sink or laundry tub; in a wet basement; or near a swimming pool.
6. **Clean only with dry cloth**
   Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a dry cloth for cleaning.
7. **Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.**
   Slots and openings in the cabinet and in the back or bottom are provided for ventilation, to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. the product should never be placed near or over a radiator or heat source. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
8. **Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.**
9. **Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. a grounding type plug has two blades and a third grounding prong. the wide blade or the third prong are provided for your safety. if the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.**
10. **Protect the power cord from being walked on or pinched particularly at plugs,convenience receptacles, and the point where they exit from the apparatus.**
11. **Only use attachments/accessories specified by the manufacturer.**

12. **Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.**

13. **Unplug this apparatus during lightning storms or when unused for long periods of time.**

14. **Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture does not operate normally, or has been dropped.**

15. **Power Source**
The product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.

16. **Power lines**
An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

17. **Overloading**
Do not overload wall outlets and extension cords as this can result in a risk or fire or electric shock.

18. **Object and liquid entry**
Never push objects of any kind into the product through as they may touch dangerous voltage points or short out parts that could result in fire or electric shock.
Never spill or spray any type of liquid on the product.

19. **Outdoor antenna grounding**
If an outside antenna is connected to the product, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges.

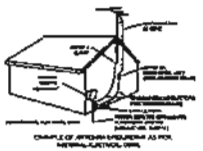

Section 810 of the National Electrical Code, ANSI/NFPA 70, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge product, size of grounding conductors, location of antenna discharge product, connection to grounding electrodes and requirements for the grounding electrodes.

20. **Service**
Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

21. **Replacement parts**
When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original part. Unauthorized substitutions may result in fire or electric shock or other hazards.

22. **Safety check**
Upon completion of any service or repairs to this product ask the service technician to perform safety checks to determine that the product is in proper operating condition

23. **Wall or ceiling mounting**
The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

24. **Damage requiring service**
Unplug the product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

a. When the power-supply cord or plug is damaged.
b. If liquid has been spilled or objects have fallen into the product.
c. If the product has been exposed to rain or water.
d. If the product does not operate normally by following the operating instructions.
Adjust only those controls that are covered by the operating instructions, as an adjustment of other controls may result in damage and will require extensive work by a qualified technician to restore the product to its normal operation.
e. If the product has been dropped or the cabinet has been damaged.
f. When the product exhibits a distinct change in performance – this indicates a need for service.

25. **Note to CATV system installer**
This reminder is provided to call the CATV system installer 's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Note:
Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged any way such as the following: the power-supply cord or plug has been damaged, liquid has been spilled into the unit, the unit has been exposed to rain or moisture, the unit has been dropped or the unit does not operate normally.

INSTALLATION

1. Main Body
2. Base
3. Washer
4. Screw
5. Speaker Net
6. Tweeter
7. Remote Sensor
8. Loud Speakers
9. Woofer

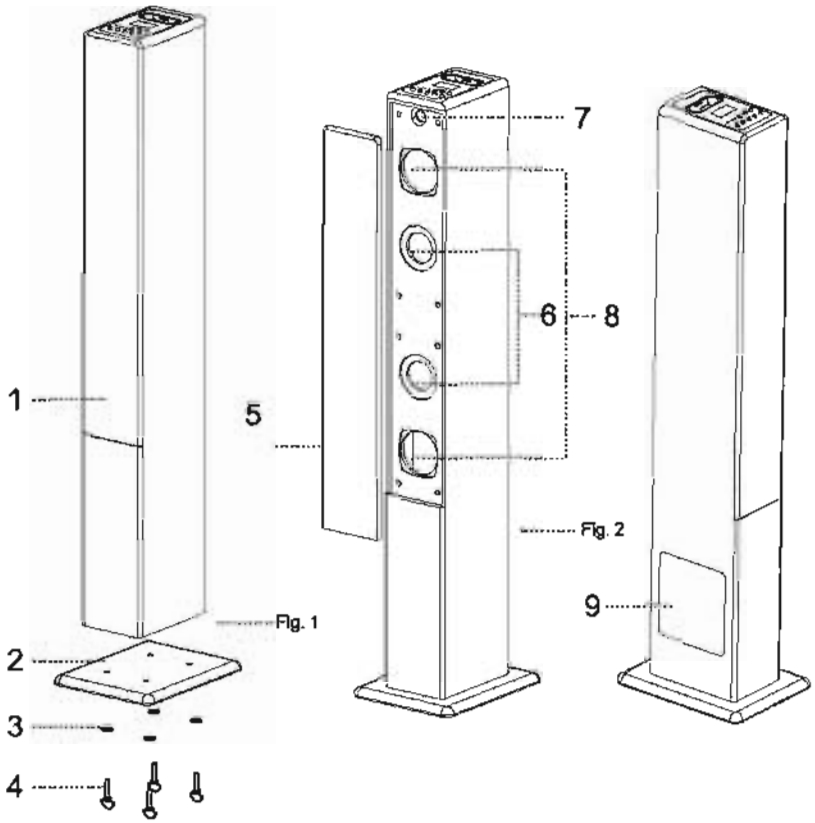

1). Assemble the wooden base to the main body by the supplied screws and washers as the Fig. 1 above.

2). The speaker net can be taken out and reassembled as in Fig. 2 above.

LOCATION OF CONTROLS

1. ANT (Antenna for FM Radio)
2. VIDEO OUT Jack
3. AUX 1 Input Jacks
4. POWER ON/OFF Switch
5. AUX 2 (Input) Jack
6. VOL (Volume) - Button
7. VOL (Volume) + Button
8. STANDBY Indicator
9. ⏻ Standby ON/OFF Button
10. ⏮ /TUNE - Button
11. ⏯/⏲ Button
12. ⏭ /TUNE + Button
13. SOURCE Button

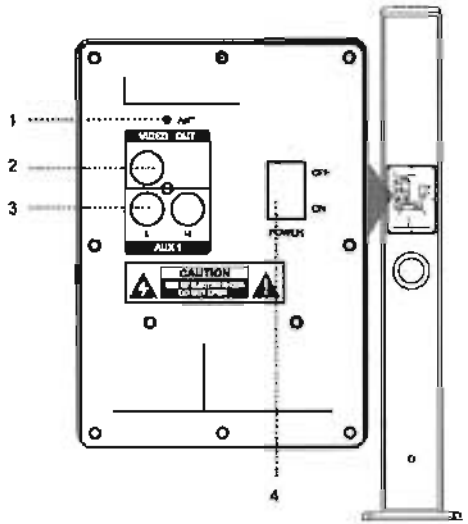

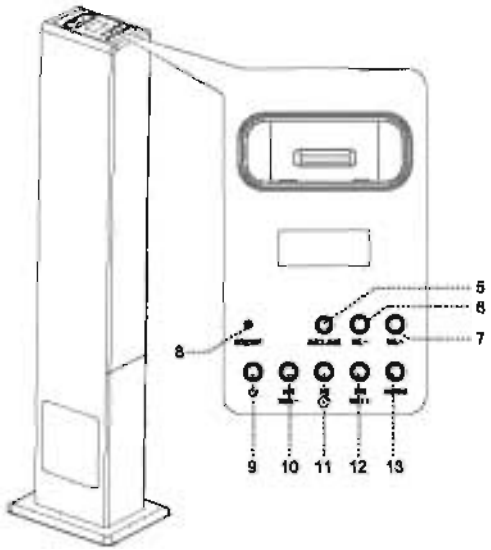

REMOTE CONTROL - LOCATION OF CONTROLS

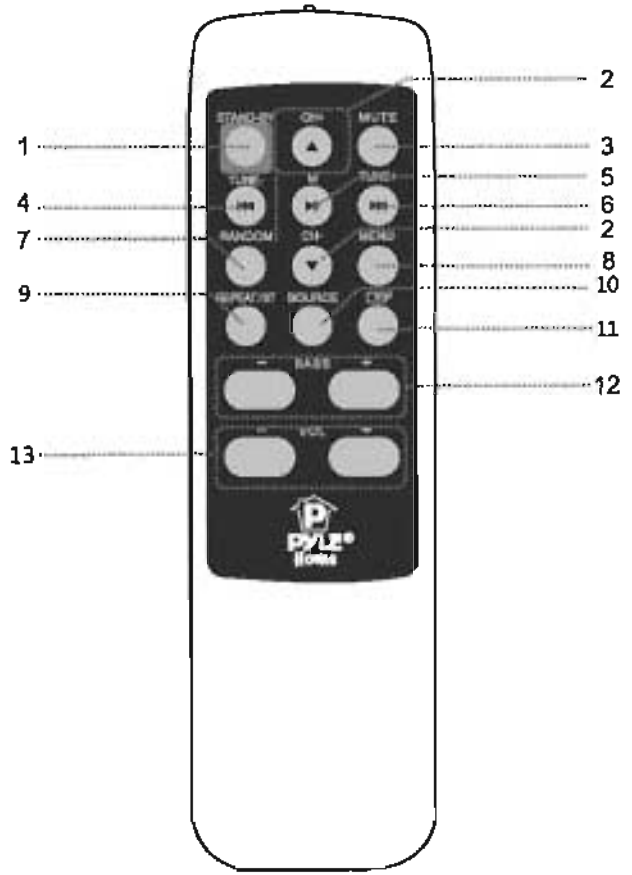

1. STANDBY Button
2. ▲/▼(CH+/CH-) Button
3. MUTE Button
4. ⏮/TUNE - Button
5. ⏯ / M (Play/Pause/Memory) Button
6. ⏭/TUNE + Button
7. RANDOM Button
8. MENU Button
9. REPEAT/ST (Stereo) Button
10. SOURCE Button
11. ⏎ Enter Button
12. BASS +/- Buttons
13. VOL (Volume) +/- Buttons

BATTERIES INSTALLATION (REMOTE CONTROL)

1. Slide and lift the battery door as figure 1 below.
2. Install 2 (two) AAA size batteries (included) into the battery compartment as the polarity markings inside as figure 2 below.
3. Replace the battery door as figure 3 below.

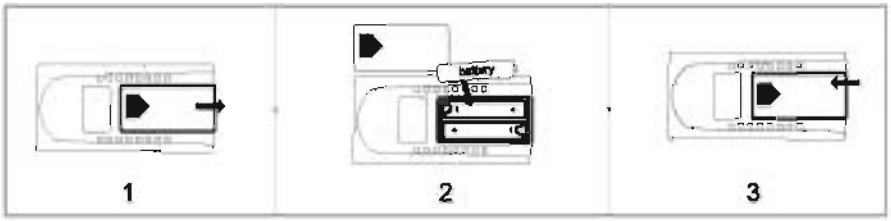

BATTERY PRECAUTIONS:

Follow these precautions when using a battery in this device:

1. Use only the size and type of battery specified.
2. Be sure to follow the correct polarity when installing the battery as indicated in the battery compartment. A reversed battery may cause damage to the device.
3. Do not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with fresh ones.
4. If the batteries in the device are consumed or the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge the battery not intended to be recharged; it can overheat and rupture. (Follow battery manufacturer's instructions.)
6. The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
7. Clean the battery contacts and also those of the device prior to battery installation

EFFECTIVE DISTANCE OF REMOTE TRANSMITTER

NOTES:

- When there is an obstacle between the unit and the transmitter, the transmitter may not operate.
- When direct sunlight, an incandescent lamp, fluorescent lamp or any other strong light shines on the REMOTE SENSOR of the unit, the remote operation may be unstable.

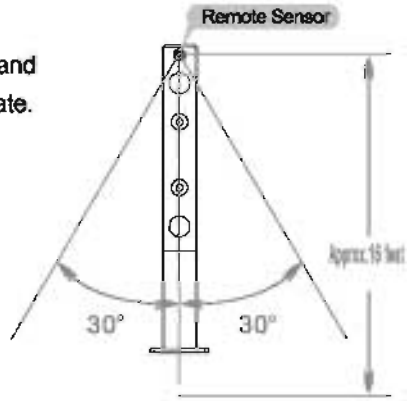

GENERAL OPERATION

1. Press the POWER Switch on the rear of unit to ON position to power on the unit. The STANDBY Indicator will turn on.
2. Press the STANDBY Button on the unit or Remote Control to turn on the unit from standby mode. The STANDBY Indicator will turn off but the LCD Display will turn on.
3. Press the SOURCE Button on the unit or Remote Control repeatedly to select the input source as the connections to AUX 1 (LCD shows "AUX1"); AUX 2 (LCD shows "AUX2"); iPod/iPhone (LCD shows "IPOD") or Radio FM mode (LCD shows current FM station's frequency).
4. Press the VOL (Volume) +/- Buttons to adjust volume level.
5. Press the BASS +/- Buttons on the Remote Control to increase/decrease the bass level.
6. Press the MUTE Button on the Remote Control to turn off the sound temporary, press again to turn the sound back on.
7. When finished, press the STANDBY Button on the unit or Remote Control to turn the unit off (standby mode).
8. If the unit is not used for a long period of time, turn off the unit by press the Power ON/OFF Switch on the rear of unit to OFF position.

SYSTEM CONNECTIONS

Listening to music from external audio device or iPod/iPhone:

1. Plug the iPod/iPhone to the iPod/iPhone docking. Or, Connect the external audio device such as MP3 Player to the AUX 2 Jack on the top of unit as the figure below.
2. Power on the unit, press the SOURCE Button repeatedly to set to AUX 2 or IPod/IPhone as the connection.
3. Play the music in the connected audio device or iPod/iPhone as usual.

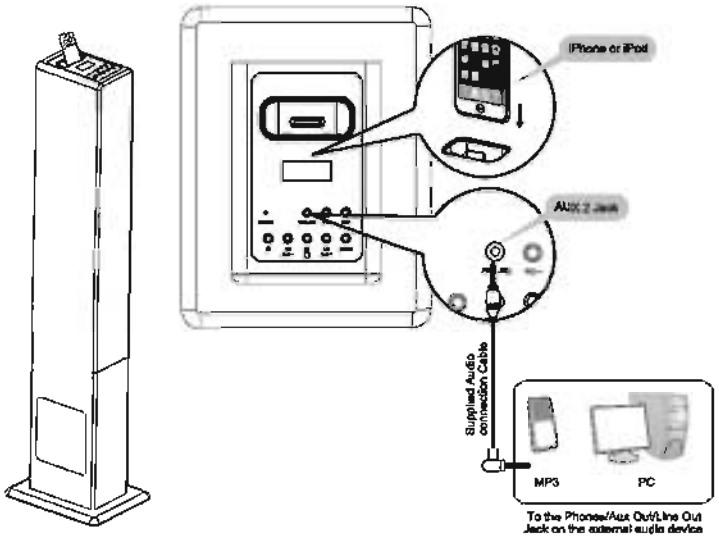

To watch video files In the connected iPod/IPhone:

1. Connect the external TV to the Video Out Jack on the rear of unit as the figure below (connection cable not included).
2. Set the TV to AV 1 or AV 2 modes as connection.
3. Plug the iPod/iPhone to the iPod/iPhone docking on the top of unit.
4. Press the source button repeatedly until "IPOD" appear on the display.
5. Play the video files in the connected iPod/iPhone as usual (Make sure it is set to TV out. For details, please refer to the IPod/iPhone's User's Manual).

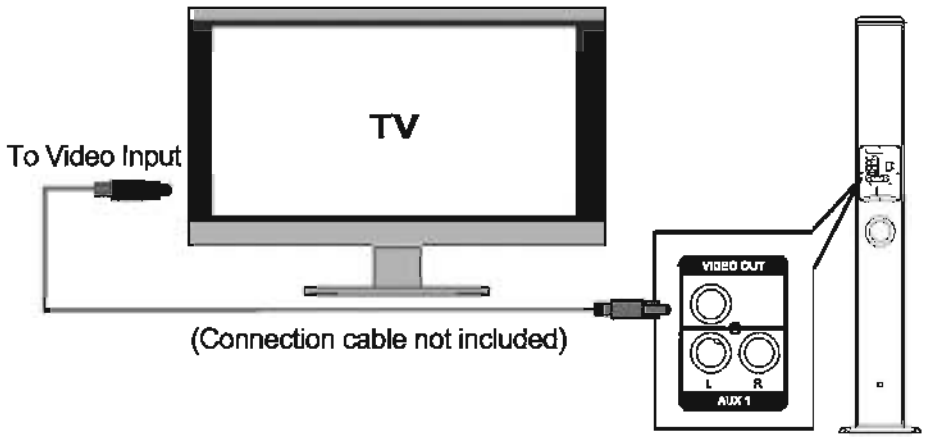

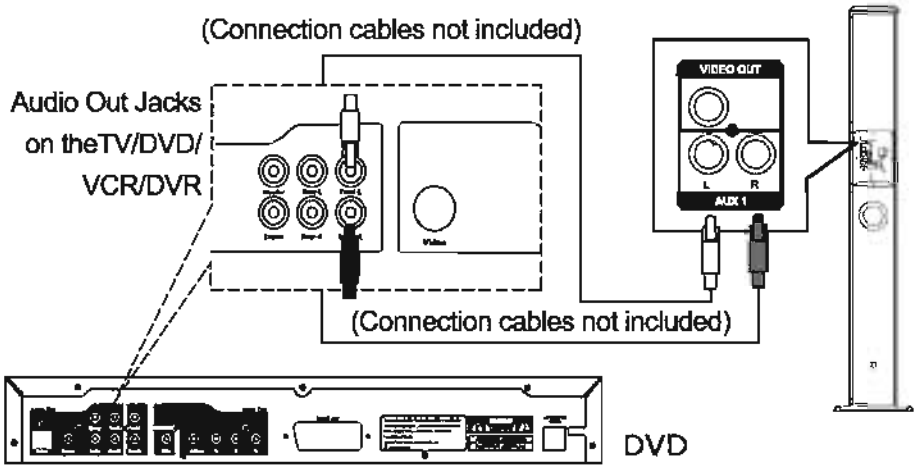

To listen to music from TV;DVD Player; VCR or DVR.

1. Connect the external TV/DVD/VCR/DVR to the AUX 1 Jack on the rear of unit as the figure above (connection cable not included).
2. Power on the connected external device and play video/music as usual.
3. Power on the unit, press the SOURCE Button repeatedly until AUX 1 Indicator is light.

LISTEN TO IPOD/IPHONE

1. When iPod or iPhone is connected, it will recharge automatically.
2. Power on the unit as specified previously, press the SOURCE Button on the unit or Remote Control repeatedly until "IPOD" appear on the display. The unit will start playback automatically.
3. During playback the music/video files from iPod or iPhone:

A. Press the Skip/Fast Search ⏭ or ⏮ Buttons repeatedly to skip the tracks forward/backward.

B. Press and hold the Skip/Fast Search ⏭ or ⏮ to fast search the specific section of the track forward/backward.

C. Press the REPEAT Button on the Remote Control to set repeat modes, corresponding icons will appear on the connected iPod/iPhone s display.

D. Press the RANDOM Button on the Remote Control to turn the random playback mode on or off , corresponding icons will appear on the connected iPod/iPhone's display.

E. Press the MENU Button on the Remote Control, the setting menu will appear on the

connected iPod/iPhone's display. Using the Direction ▲ / ▼; Skip/Fast Search ⏭, ⏮ Buttons to move the cursor within the display, press the ENTER Button to confirm the selections.

LISTEN TO FM RADIO

Extend the FM antenna wire on the rear of the unit and adjust it to get the best reception.

1) Power ON the unit as previously indicated.
2) Press the SOURCE button on the unit or remote control repeatedly until FM frequency appears on the display.
3) Press ⏮ or ⏭ button on remote control repeatedly to search the specific radio station. (Or, press and hold the ⏮ or ⏭ button 1 second then release the button. The unit will auto search the next or previous available radio station then stop).
4) To store the current received radio station into the memory. Press the ⏯/M button on the Remote Control, CH XX will appear on the display. Press the CH+/CH- Buttons on the Remote Control repeatedly to select channel number as desire. Press the M button again to store the current radio station into the selected channel (Total 20 FM stations can be preset into the memory).
5) To listen the preset channels, press the CH+/CH- buttons on the Remote Control or the ↻ Button on the unit repeatedly to the desired channel.
6) Press the REPEAT/ST Button on the remote control repeatedly to set the radio to stereo or mono mode. STEREO or MONO will appear on the display.

TROUBLESHOOTING GUIDE

Check the following before requesting service		
SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION
No power	AC Plug not plugged into wall outlet	Plug it to the wall outlet properly
	POWER Switch in OFF position	Press the POWER Switch on the rear of unit to ON position
	The unit in standby mode (STANDBY Indicator is lit)	Press the STANDBY Button on the unit or Remote Control to turn on the unit from standby mode. The STANDBY indicator will turn off and the Display will turn ON.
No Sound	Volume in minimum position	Raise volume level by pressing the VOL (Volume) + Button
	The connected device is not in playback mode	Play the music/movie in the connected device
	Sound output of the connected device weak	Raise the volume level of the connected device
	Input source incorrect	Set the input source to AUX 1, AUX 2, IPod/IPhone or Radio as the corresponding to connected device
Sound distortion	Volume level too high	Reduce the volume level by pressing the VOL (Volume) - Button
	Bass level too high	Reduce the bass level by pressing the BASS - Button
	Volume level of the connected device too high	Reduce the volume level of the connected device
	EQ of the connected device was set to super bass or others mode	Set the EQ of the connected device to normal
No video output	The connected IPod/IPhone is not set to TV Out mode	Set the connected iPod/iPhone to TV OUT Mode (For details, please refer to the iPod/iPhone's User's Manual)
Remote not functioning		Point the remote control to the remote sensor on the unit within 16 feet , +/- 30 degree
	The batteries in the remote control are consumed.	Replace with new batteries
Radio reception weak		Extend the FM antenna wire on the rear of the unit and adjust it to get better reception.

GENERAL SPECIFICATIONS

Power Source of Remote Control: .....DC ⎓ 3V, 2 x AAA size batteries (Included)
Power Consumption: ..... 50 W

Radio Coverage..... FM 87.5 - 108.0 MHz
Impedance of Speakers:
Woofer ..... 8 Ohm, 30 W
Loud speakers ..... 4 Ohm, 10 W x 2
Tweeter ..... 8 Ohm, 5 W x 2

Accessories:

1 x Instruction Manual
1 x Remote Control
2 x "AAA" size batteries for remote control
1 x Stereo audio connection cable with 3.5mm stereo plug
1x 3RCA/3RCA Coble
1 x Wooden Base
4 x Assembly Screws / Washers